


SELF-TAPPING BUSHES

NOVASERT®



307 TYPE

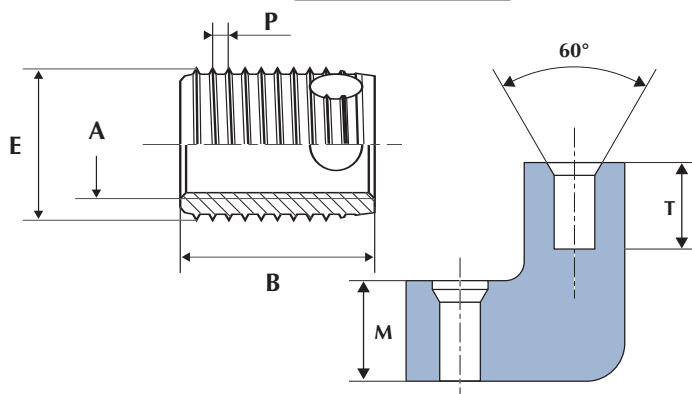

RANGE

Novaserts with three cutting holes
Special range for hard materials and for
pushing chips out of the blind hole
Shorter range for thin wall

An example to make your choice

	Bushes	Material	Diameter
What you need	NOVASERT 307 TYPE	Non hardened steel	M3
Our codification	D11	A	0350 04 0

Tapping A	External diameter E	External Pitch P	Length of the Novasert B	Minimum thick- ness for open ending holes M	Minimum depth of the hole (for blind holes) T	CODIFICATION
M3	5	0,6	4	4	6	D11 • 0350 04 0
M 3,5	6	0,8	5	5	7	D11 • 0460 05 0
M 4	6,5	0,8	6	6	8	D11 • 0470 06 0
M 5	8	1	7	7	9	D11 • 0580 07 0
M 6	10	1,25	8	8	10	D11 • 0601 08 0
M 8	12	1,5	9	9	11	D11 • 0802 09 0
M 10	14	1,5	10	10	13	D11 • 1003 10 0
M 12	16	1,75	12	12	15	D11 • 1204 12 0
M 14	18	2	14	14	17	D11 • 1405 14 0
M 16	20	2	14	14	17	D11 • 1605 14 0

Materials : Non-hardened steel
Case-hardened steel, zinc plated,
Brass
Stainless steel 1.4105, Stainless steel 1.4305

Fill in here the Prefix
for the material